

Highfield Boats

Platforms Installation Guide (SP650-800)

1. Match the holes between Platforms and transom for installation.




2. Use insulating compound to eliminate corrosion and prevent water entry.

Recommended corrosion inhibitor: Duralac, Tef-Gel, Lanocote



3. Install 1 bolt provided with the Platforms from the engine well with washer and nut.

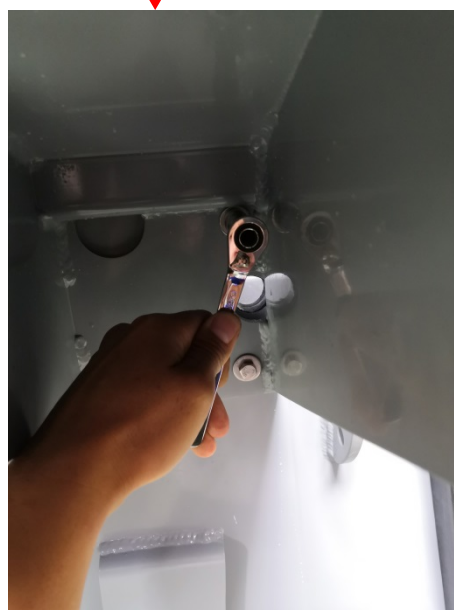

4. Install other bolts from outside with washer.





Congratulations, you have successfully installed the platforms.